


MOUNTING INSTRUCTION

2021-01-28 38-342400a



29-046000

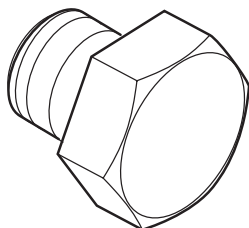

DE Stopfen M10 für Ventilkasten

DK Blindprop M10 til ventilboks

EE Ventiiikarbi M10 pistik

FI Tulppa M10 Ventiiilikotelon

FR Boîte à vannes, bouchon M10

GB Valve box plug M10

LV Vārstu kārbas M10 aizbāznis

NL Kleppenkast M10-plug

NO Plugg M10 til ventilboks

PL Zatyczka M10 skrzynki zaworowej

RU Заглушка M10 блока клапанов

SE Plugg M10 till ventillåda



Montage
Montering
Paigaldus
Asennus

Montage
Mounting
Montāžas
Montage



Montering
Montażowa
монтажу
Montering




Klemmgefahr!
Klemmerisiko!
Muljumisoht!
Puristumisvaara!

Risque d'écrasement!
Pinch point!
Traumu risks!
Risico op beknelling!

Klemfare!
Ryzyko zakleszczenia!
Риск защемления!
Klāmrisk!

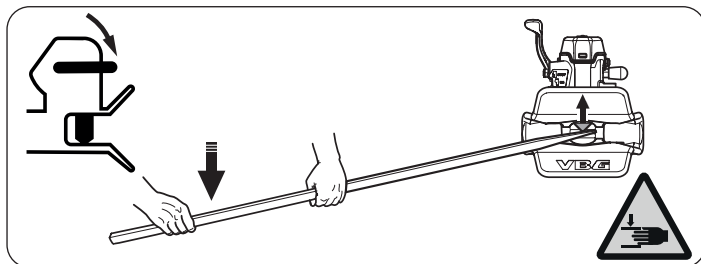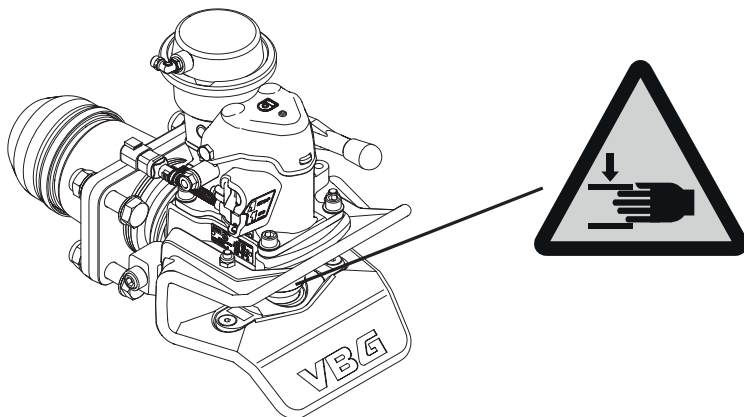


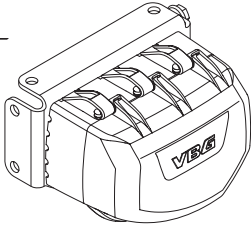


1.




2a.

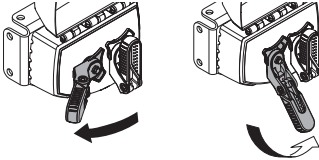


2b.

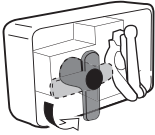

3.

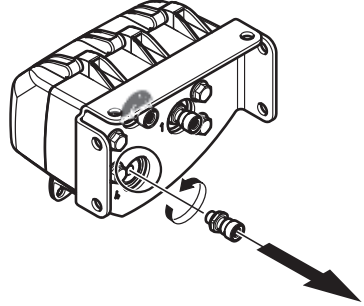


4.

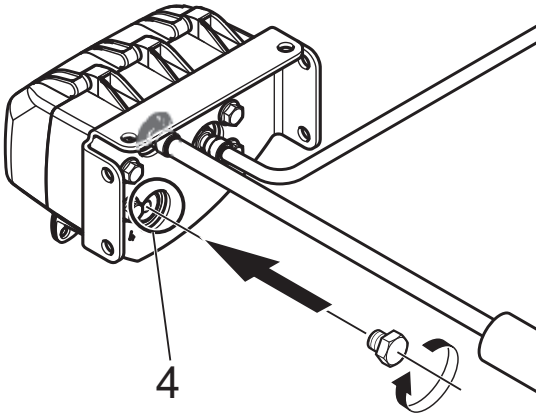


20 Nm



5a.

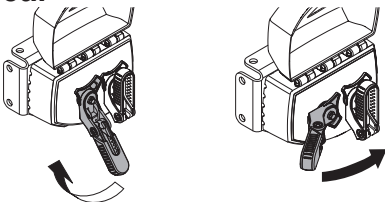

5b.

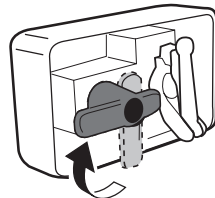

Member of VBG Group

www.vbg.eu



The strong connection